

Mad Frog Gear Sideboard TDA Kit



Sideboard shown with fishfinder head and deployed TDA mounted on it.

No drilling or gluing!

Mad Frog Gear
949.394.1181
madfroggear.com

Included in the kit:

- (1) TDA
(pre- assembled)
- (1) 1/4x20x1-5/8" Truss
Head
- (2) Washer
- (1) 1/4x20 Locknut
- (1) 8x3/4 self-taping
screw


1) First decide the where you want to mount your Sideboard TDA. It can be mounted on either side, bow or the stern. The most popular location is on the right, bow SlideTrax.

2) The SlideTrax Sideboard will need to be removed from the kayak to mount the TDA. Identify the bottom side of a Sideboard. It will be the side that has two recessed bolt holes .

3) Orient the TDA so that the long arm is running down the outer edge of the Sideboard.



And the hole in the short arm is lined up with the TDA mounting hole on the outer edge of the Sideboard. (see picture below)

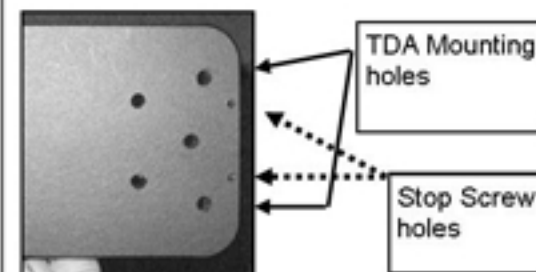

Top view of Sideboard

4) Run the Truss Head bolt, with a washer on it, from the bottom, up through this hole in the Sideboard and through the hole in the short arm. Put the second washer on the bolt followed by the locknut. Tighten the nut till the end of the bolt is

5) Screw in the Stop Screw in the smaller Stop Screw hole closest to the TDA.

TDA oriented on top of Sideboard as in step 4.

