

## Mad Frog Gear SlideTrax Sideboard



Sideboard shown with fishfinder head and deployed Transducer Deployment Arm (TDA is Patent Pending).

The Side Board mounts directly onto the Wilderness Systems SlideTrax system and provides additional accessory mounting space, without having to drill holes in your kayak.

Items commonly mounted on a Sideboard include:

- Fishfinders
- Rod Holders
- Camera Mounts
- Drink/Tool Holders


Developed by **Mad Frog Gear**  
madfroggear.com



### Included in the kit:

- (1) 10x4 1/2" Starlite Board
- (2) 1/4x20x7/8 Socket Heads
- (2) Washers
- (2) Brass Plates

- 1) Identify the top side of the Starlite Sideboard, it will be the side that does not have any recessed bolt holes (the bottom side will have two recessed holes).
- 2) Thread the Washers onto the Socket-heads then run the socket-heads through the center mounting holes on the board.

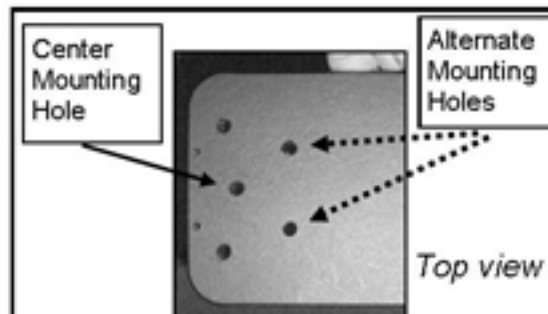

- 3) Screw the brass plates onto the socket heads, till the end if the socket head is starting to come through the brass plate. This should leave enough space between the bottom of the board and the brass plate that you will be able to slide the unit onto the Slidetrax rails on the kayak. (If you want to adjust the side to side position of the board, you may wish to use one of the alternate mounting holes instead of the center mounting hole.)
- 4) Slide unit onto the track.
- 5) Position the unit on the track (checking to insure it is not in the way of your paddle stroke, tighten the Socket Heads .
- 6) Attach accessories with 1/2" self-tapping screws.